



ตะไบเพชร

Diamond File

Usage good at a diamond file

A. Please perform wet grinding as much as possible. Sharpness often lasts long rather than dry type.


B. In case of loading, please wash well with a toothbrush.

C. please wash enough with water after dipping the portion of a diamond in a nitric acid solution several seconds, especially when a loading is remarkable.

If it dips for a long time more than needed, the opposite effect will be caused on the contrary, accuracy will also fall, and a life will also be shrunk, so please be careful.


• For precise

5 group

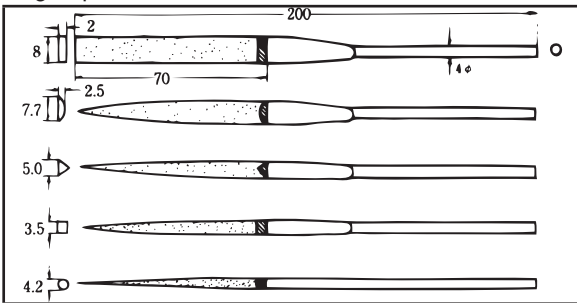


• For ironworkers


5 group

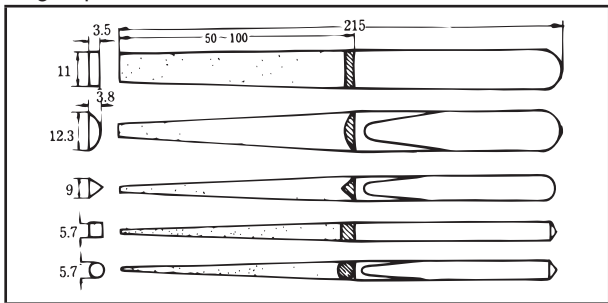


8 group

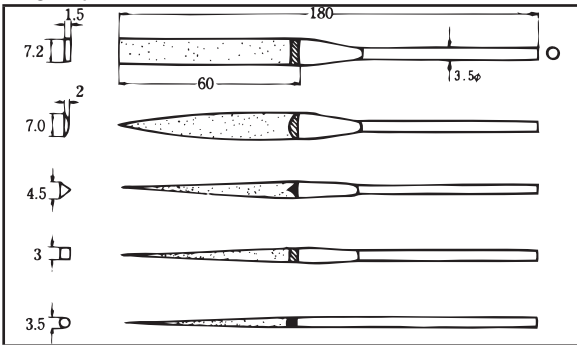


8 group

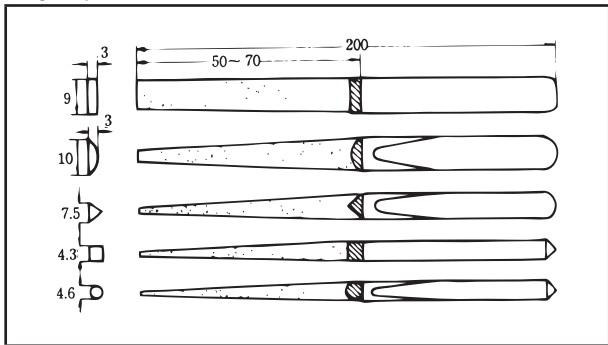


10 group

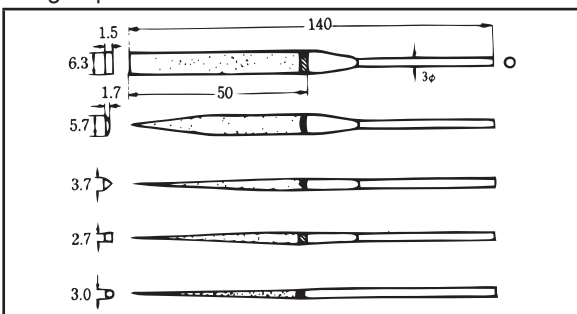


10 group

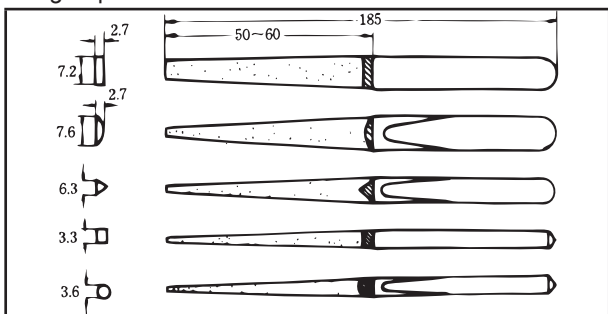

12 group

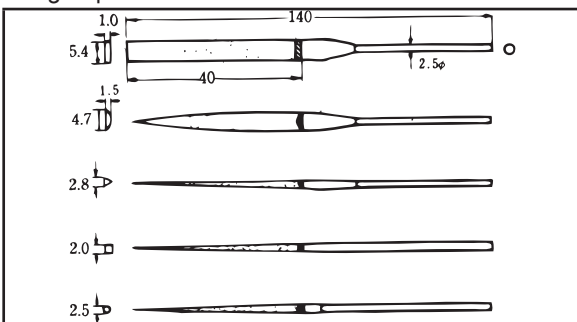

12 group

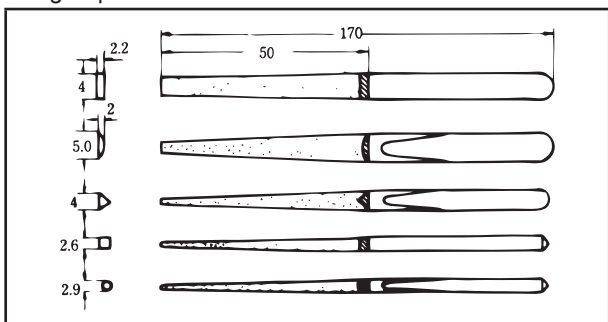

Wheel

Sintered
Compact Tool

Electrolytic
Deposition
Tools

File

DIAMOND TOOLS

เครื่องมือเพชร



ตะไบเพชร

Diamond • Special file N Series

NBW type #150

In addition to seven conventional kind, five kinds increased, and it became much more easy-to-use.

Order No. 12816	Common	
Order No. 12861	Reverse half-circle	
Order No. 12862	Small half-circle	
Order No. 12863	Big half-circle	
Order No. 12865	half-circle	
Order No. 12843	Triangle	

NBW type #200

This is somewhat smaller than NBW type.
This is suitable for the work of a small place.

Order No. 2001	Common	
Order No. 2003	Triangle	
Order No. 2004	Angle	
Order No. 2006	Ellipse	
Order No. 2007	One Ellipse	
Order No. 2005	Circle	

Order No. 12830	Angle	
Order No. 12872	Ellipse	
Order No. 12883	Big Circle	
Order No. 12884	Small Circle	
Order No. 12885	Spring	
Order No. 12855	Edged tool	

NBS type #200

This is suitable for the work of a deep place and fits your hand.

Order No. 3001	Common	
Order No. 3003	Triangle	
Order No. 3004	Angle	
Order No. 3006	Ellipse	
Order No. 3005	Circle	
Order No. 3008	Spring	